HOOVER

BUILT-IN OVENS

33700789 HOP4074X

Service Manual

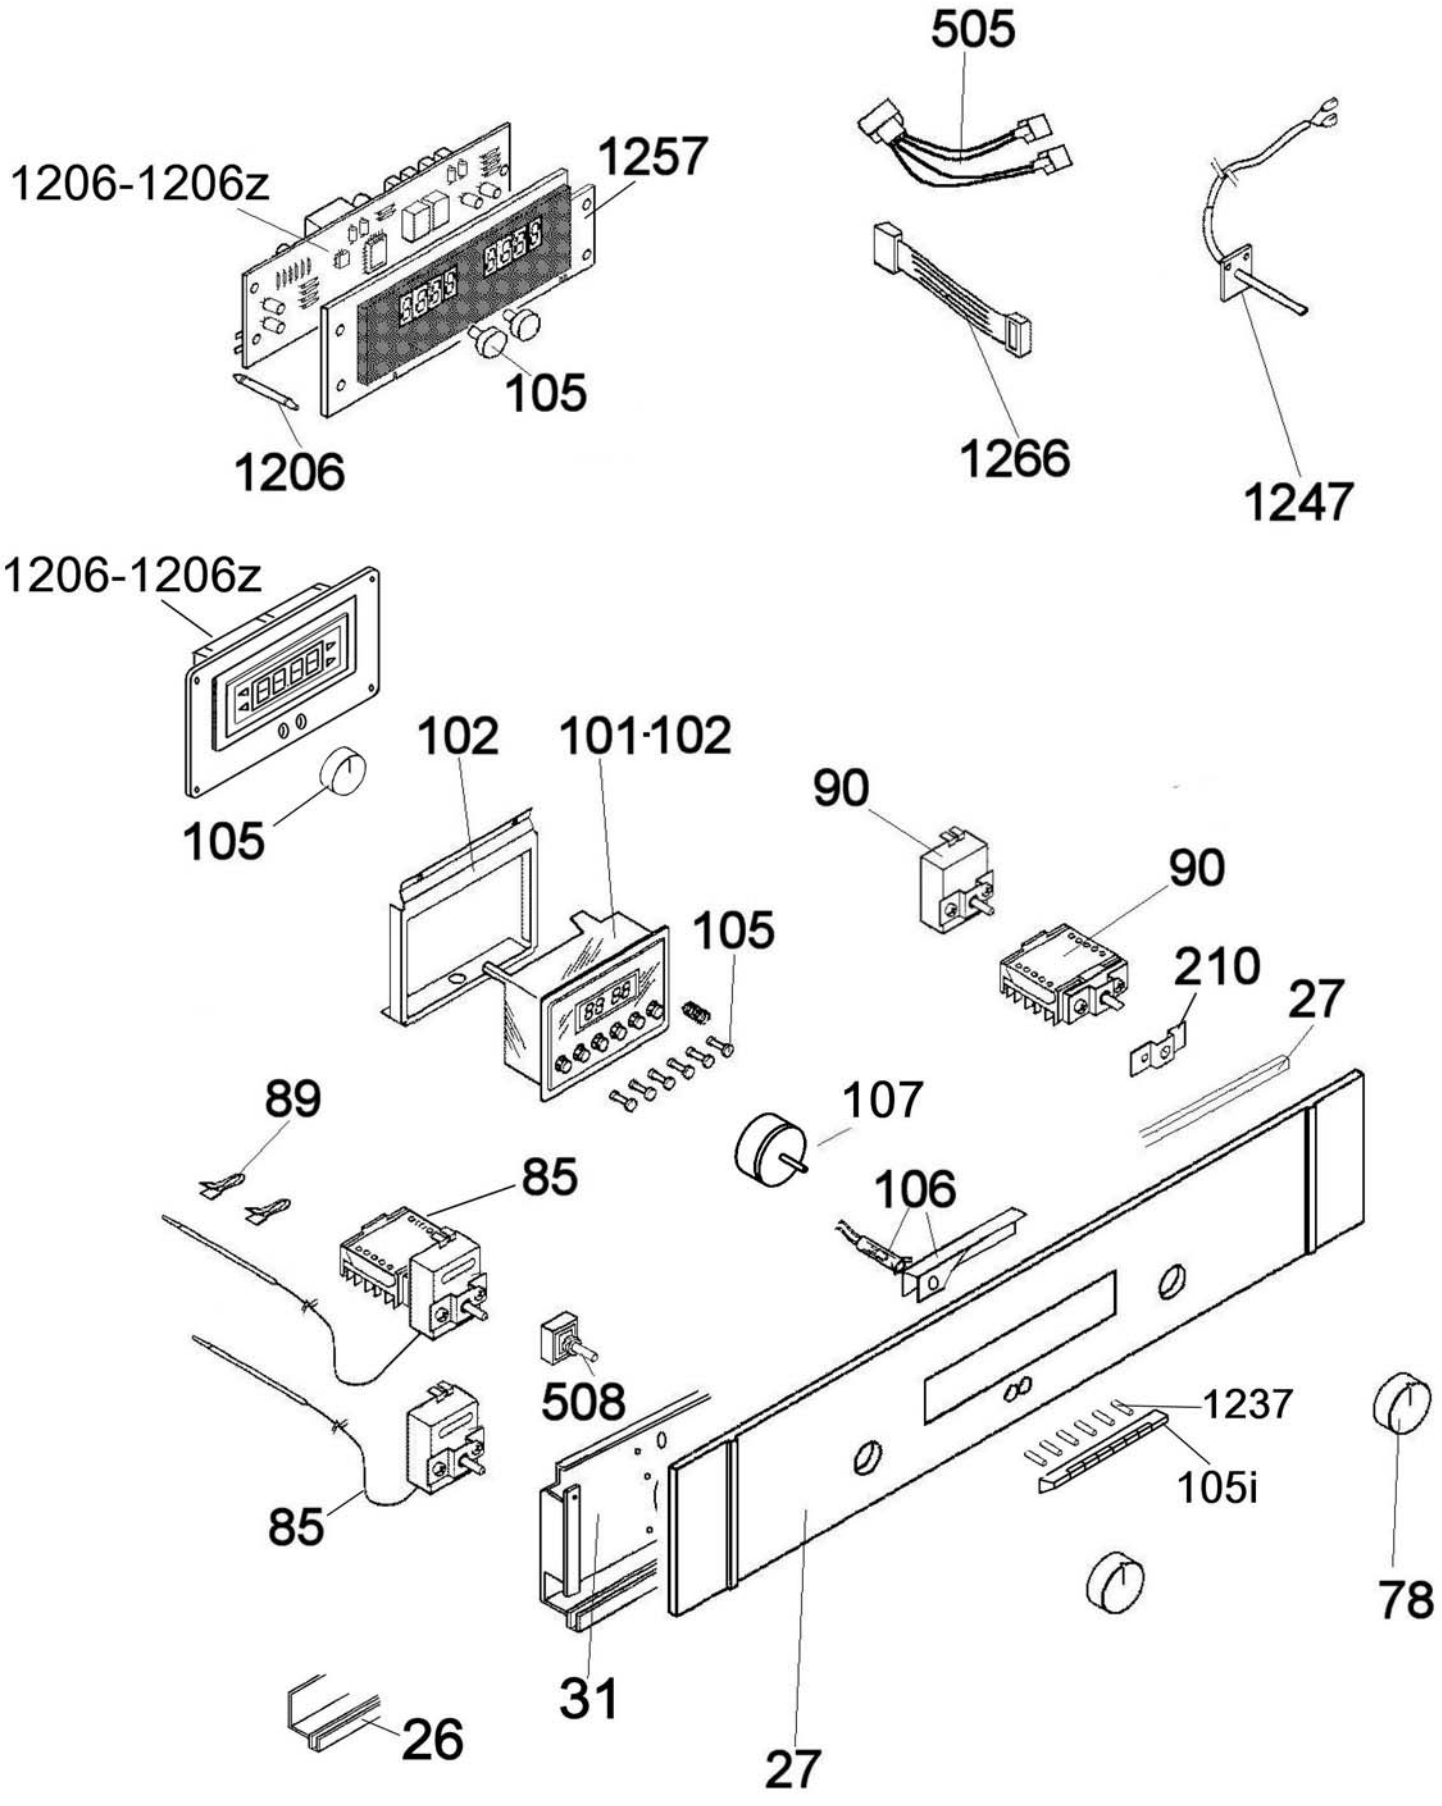
505
1206-1206z
1257
105
1206
1266
1247
1206-1206z
105
102
101-102
90
90
105
210
27
89
107
85
106
508
1237
105i
85
78
31
26
27

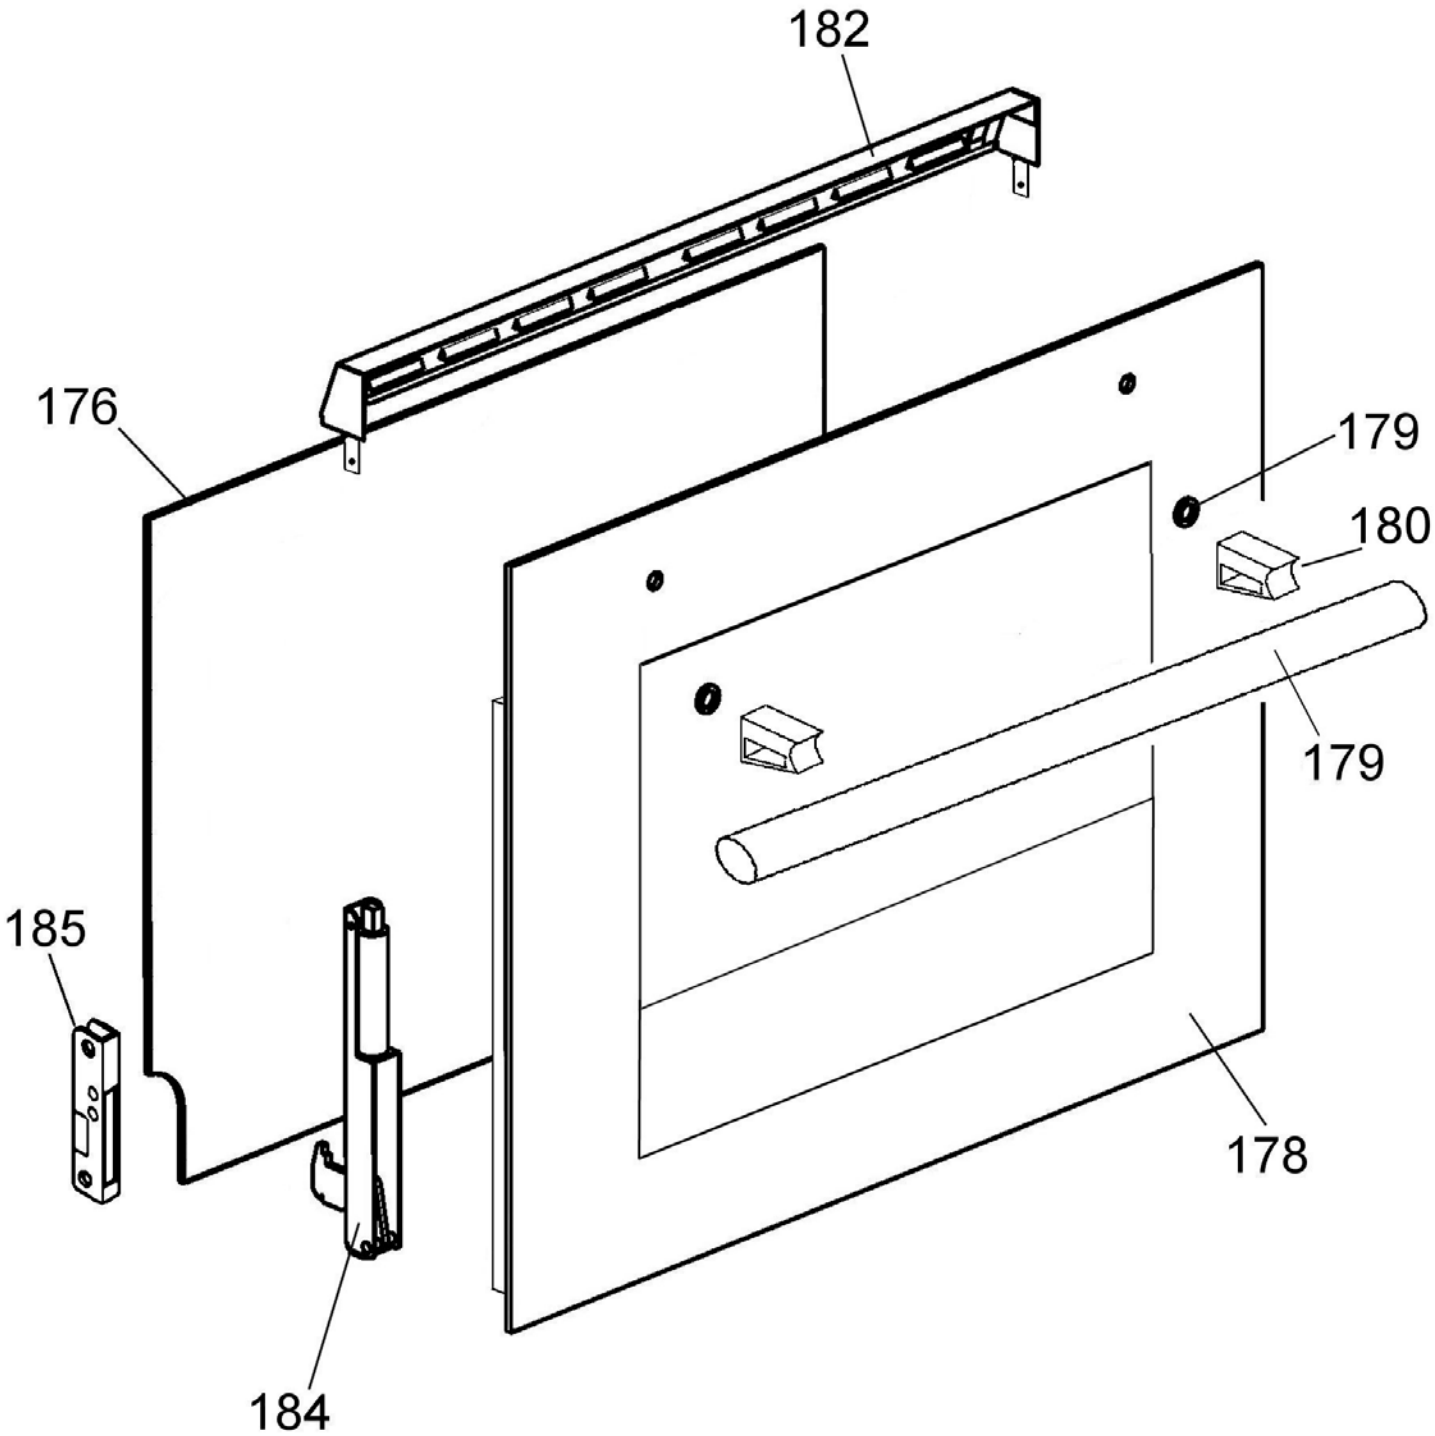
182
176
179
180
179
185
178
184

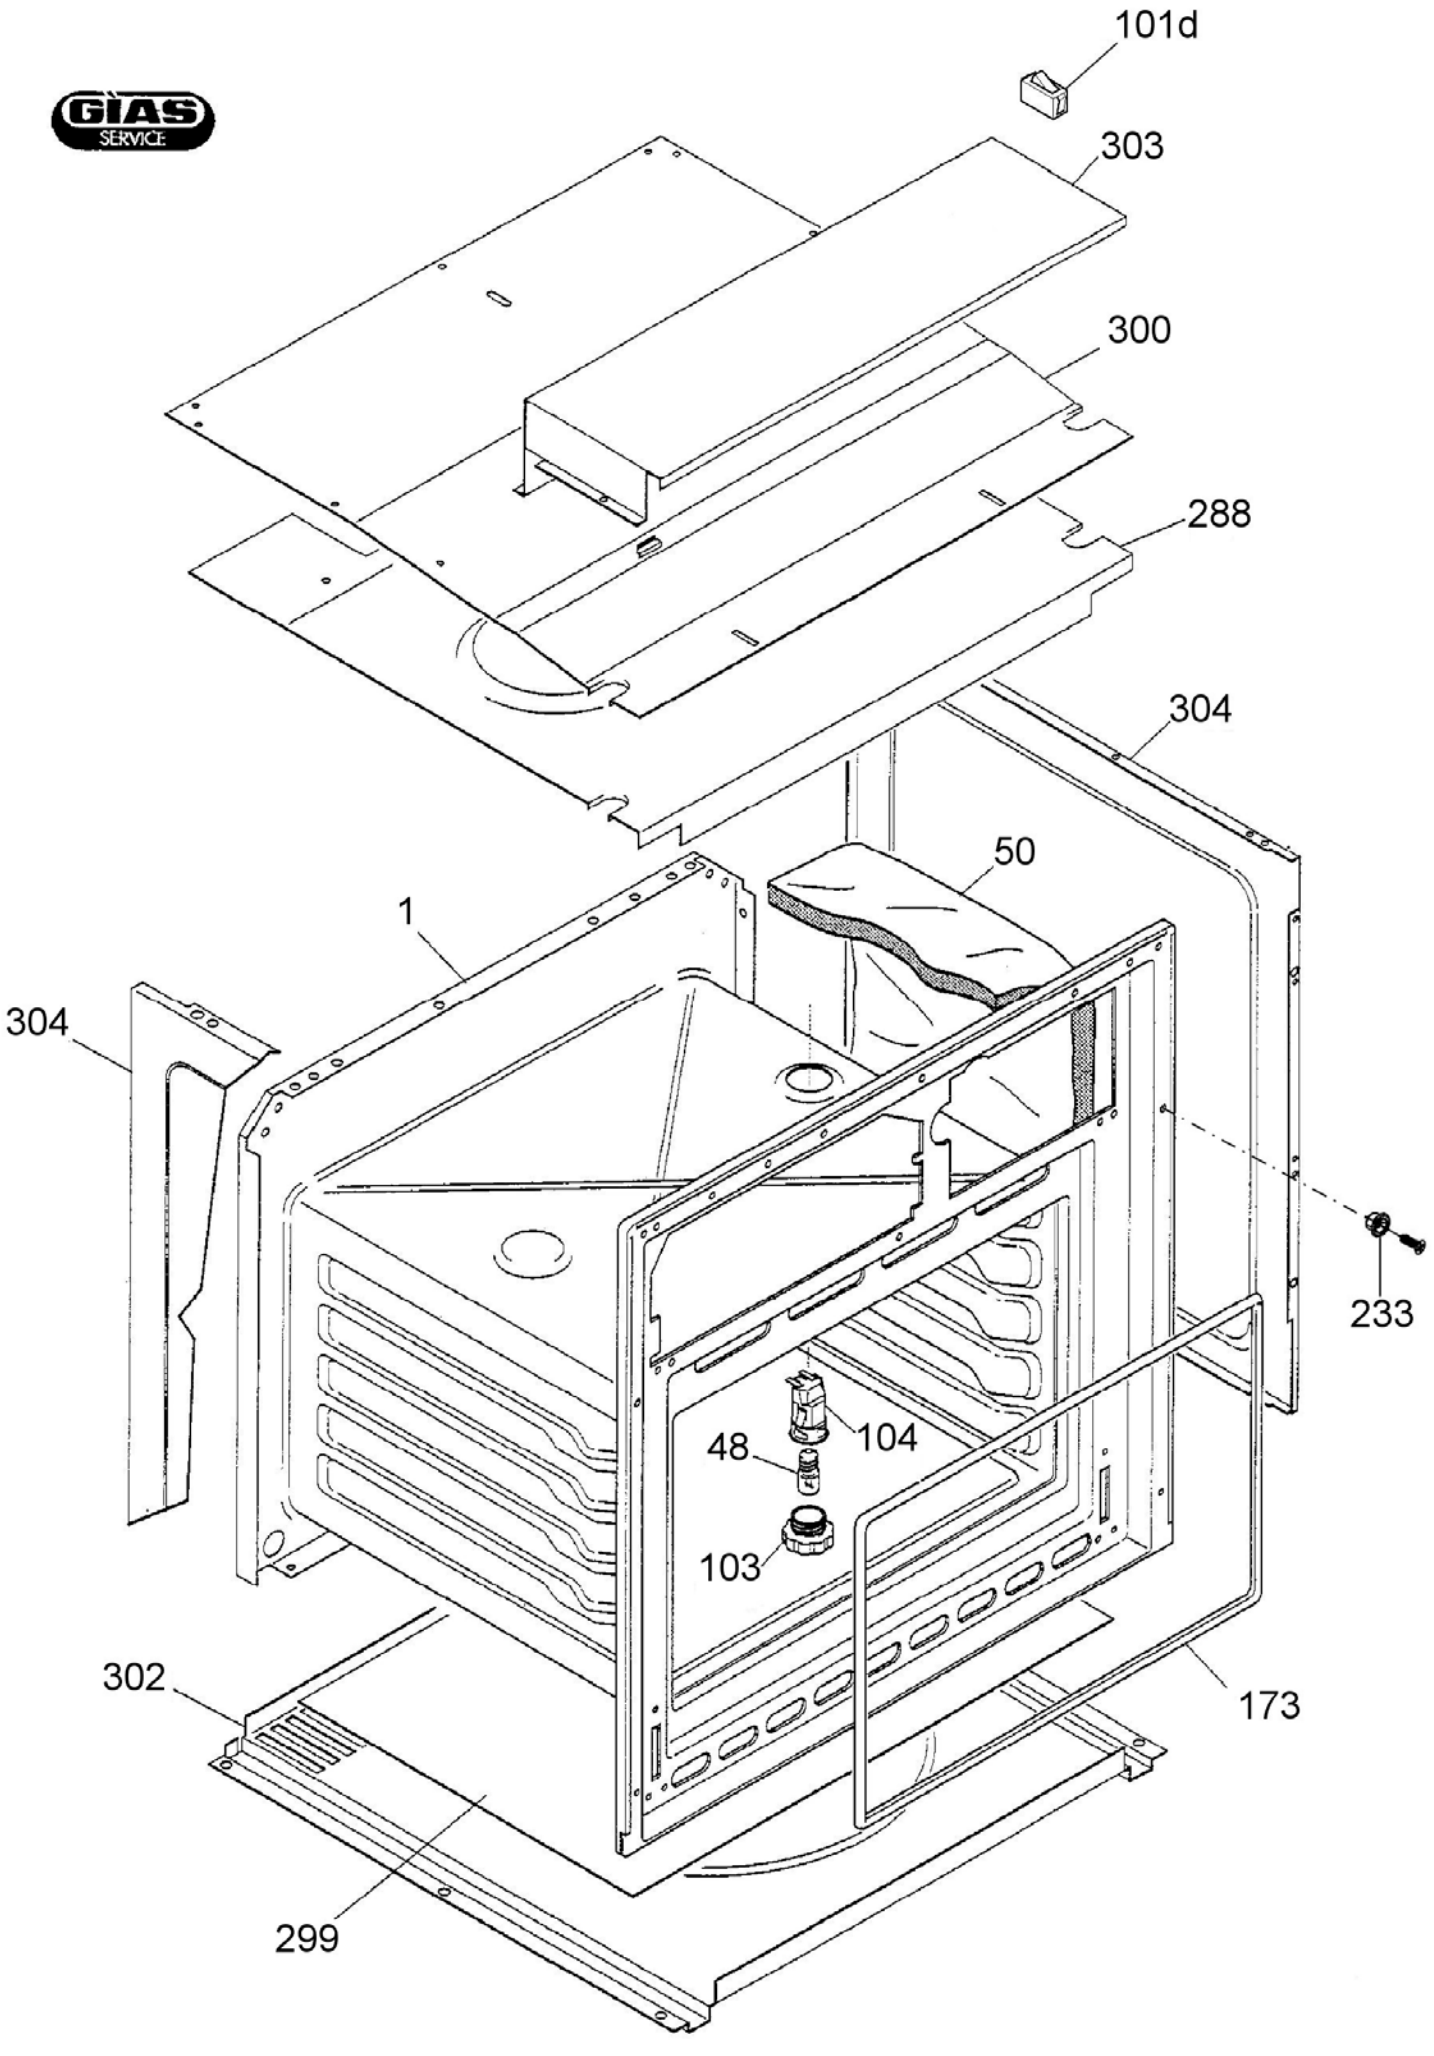
101d
303
300
288
304
50
1
304
233
48
104
103
302
173
299

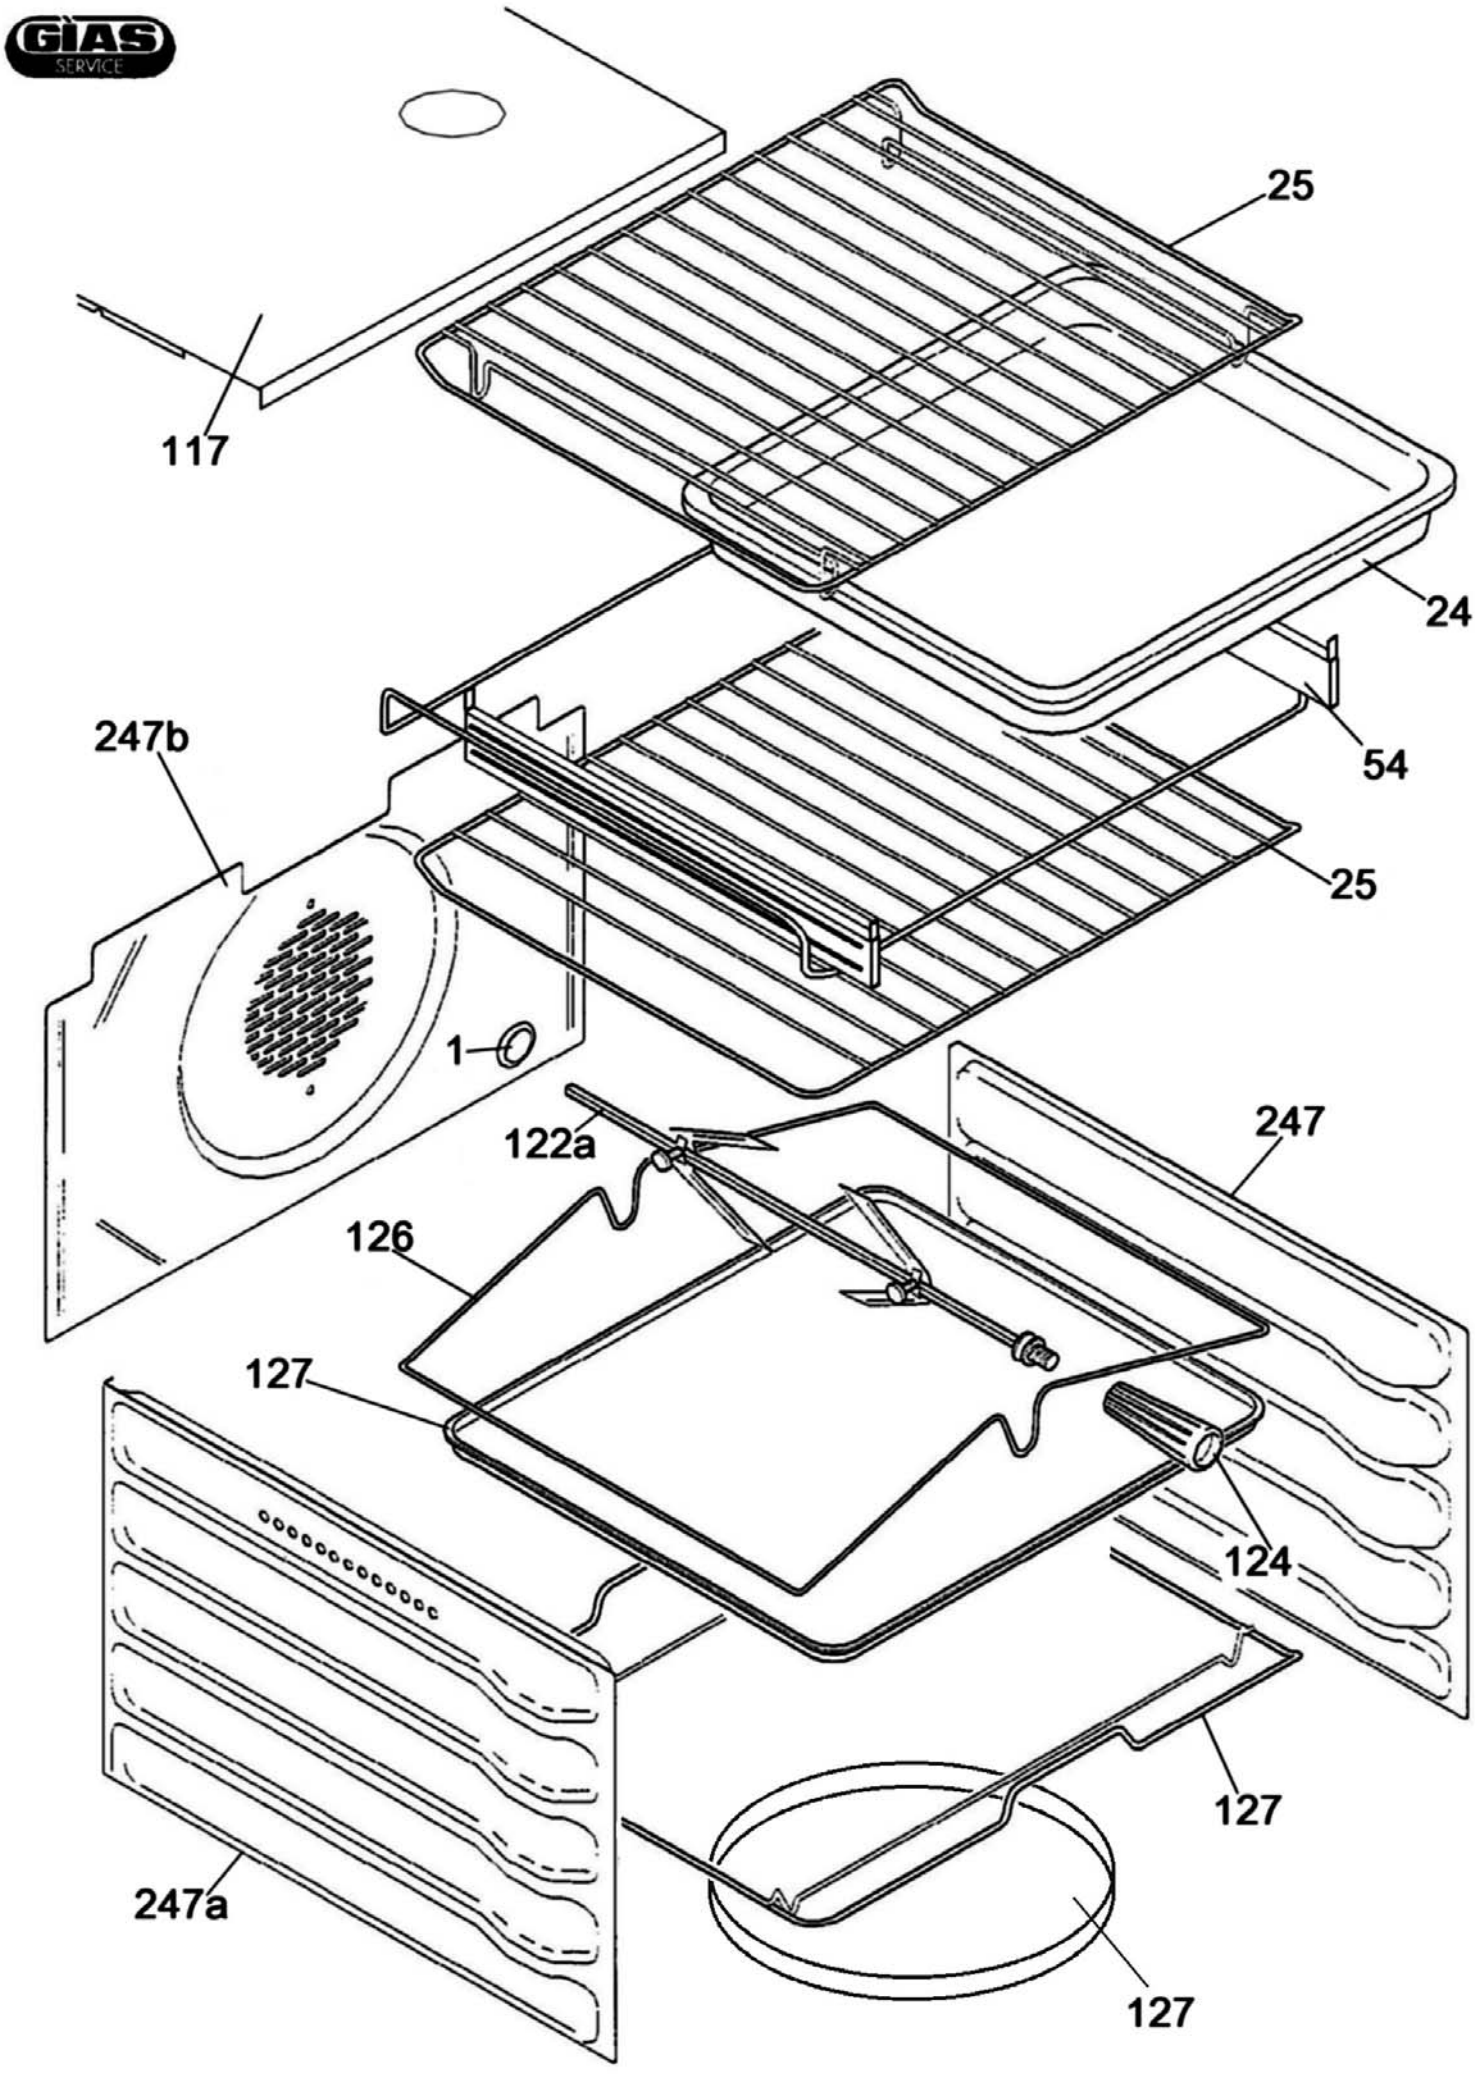
25
117
24
54
247b
25
1
122a
247
126
127
124
127
247a
127
iecu0074

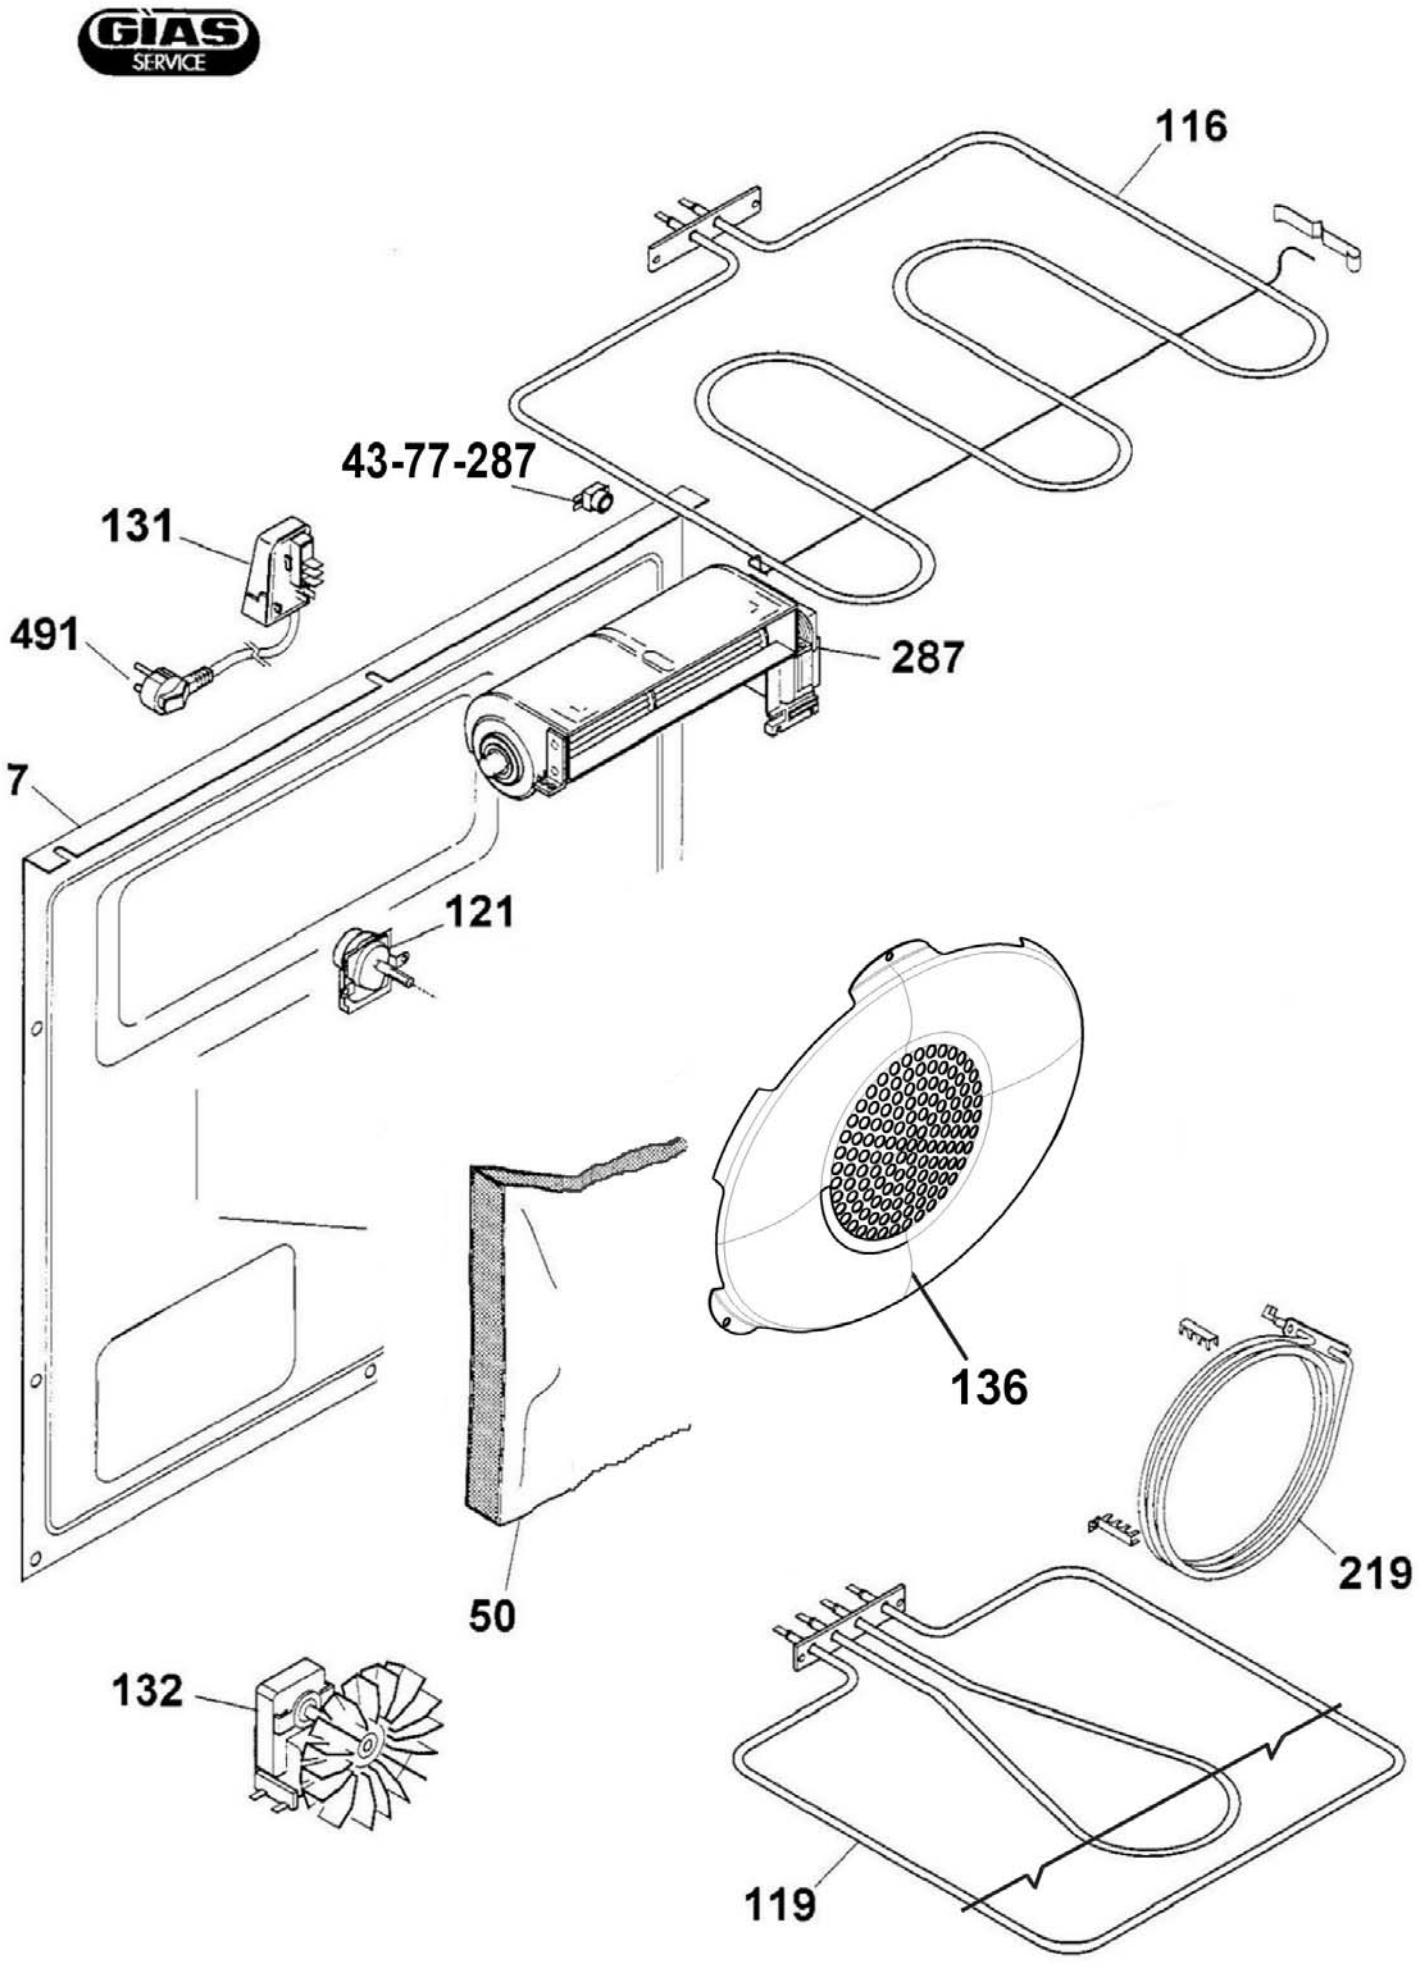

iecu1475

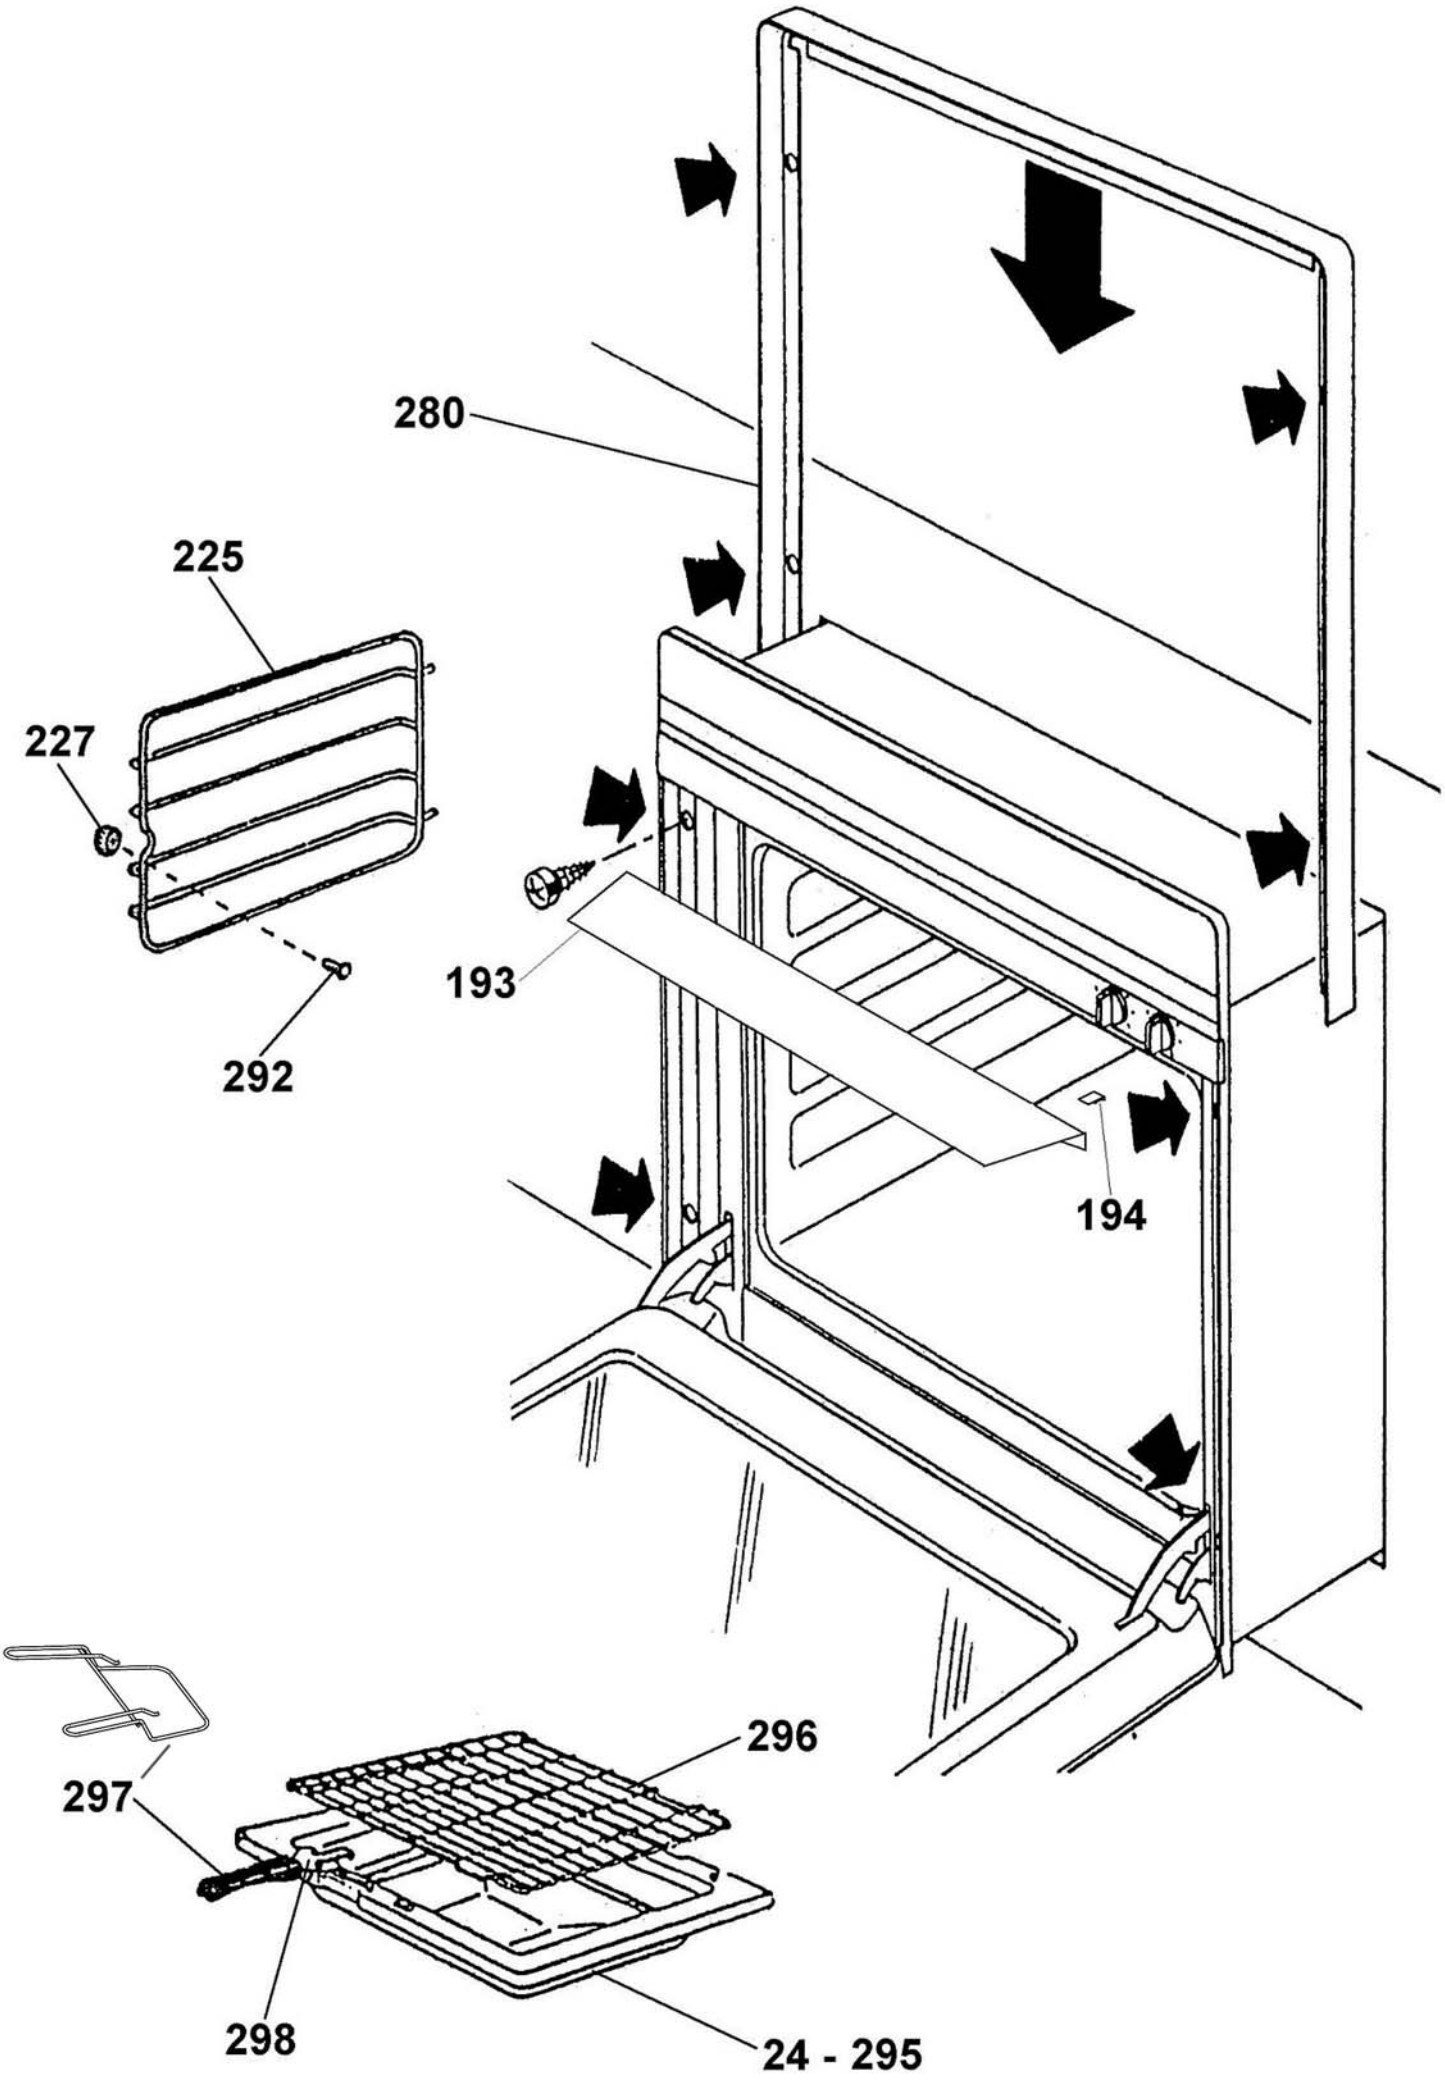

iecu0651

33700789 HOP4074X 1020 (14/05/2010)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
7	Rear insulator wall	92898873		
24	Oven tray	91800538		
25	Oven shelf	41028622		
27	Dashboard	42803011		
48	Oven inner light bulb	92208610		
50	Glass wool insulator	41029663		
50a	Heater hole insulation	92950377		
77c	Security thermostat	92218171		
78b	Knob	41030067		
90a	Oven change over switch	41030297		
103	Oven lamp glass	92615459		
104	Oven lampholder	92208925		
105g	Timer knob	41014288		
116	Oven/grill upper heater	42800790		
119	Oven low.heating element	41020672		
131c	Junction box	92125541		
132	Motor fan	41031300		
136	Fan protection	42800673		
173a	-O- shaped gasket	41023744		
176	Oven door inner glass	41028331		
178	Oven door glass	42802688		
179e	Handle bushing	41025652		
179i	Oven door handle	41009967		
180a	Handle support	41009926		
182g	Glass Holding Conveyor	41026896		
184	Oven door hinge	42802921		1040 (29/09/2010)
184	Oven door hinge	42805352	1040 (29/09/2010)	
185	Oven door hinge mounting	41024448		
210	Change ov.switch bracket	92892686		
219	Round heating element	91200888		
225e	RH Oven side grate	42802922		

Copyright 2011 Gias S.r.L.

33700789 HOP4074X 1020 (14/05/2010)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
225f	LH Oven side grate	42802923		
227	Oven side grate fix.screw	92730928		
233	Spacer bush	41030746		
287	Fan motor	91204735		
288	Conveyor assembly	41028931		
292	Screw pin	92411917		
296	UK oven tray grate	92782796		
299	Insulating cover	92890839		
300	Upper cover	91800328		
302a	Lower panel	41002306		
303	Controls shelter	92891423		
304a	R/H oven side cover	91800330		
304b	L/H oven side cover	91800331		
491	Main cable	42804290		
505a	Control panel wiring assy	41000086		
508	7 way selector	41000078		
508f	9 way selector	42800804		
999	Wiring diagram	42803015		
1206	Electronic board	49020634		
1206z	Electronic control not programmed	44004364		
1247	Temperature sensing probe	44004363		

Copyright 2011 Gias S.r.L.

33700789 HOP4074X 1020 (14/05/2010) - Modifications History -

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
	OVEN DOOR HINGE			
184	Oven door hinge	42802921		1040 (29/09/2010)
184	Oven door hinge	42805352	1040 (29/09/2010)	

Copyright 2011 Gias S.r.L.

LEGENDA COMPONENTI - COMPONENT LIST - LISTE COMPOSANTES - KOMPONENTEN LISTE - LEYENDA COMPONENTES

AC		ACCENSIONE ELETTRONICA - ELECTRONIC IGNITION - ALLUMAGE ELECTRNIQUE - ELEKTRONISCHE ZUENDUNG - ENCENDIDO ELECTRONICO
AM		CATENA MICROINTERRUTTORI - IGNIT.MICROSWITCH CHAN - CHAINE DES MICROINTERRUPTEUR - ZUNDSCHALTER-KETTE - CADENA MICROINTERRUPTOR
BC		BASETTA DI LINEA CON CONNETTORE- LINE PLATE WITH CONNECTOR - PLAQUETTE DE LIGNE AVEC CONNECTEUR - LINIE SOCKEL MIT VERBINDER - REGLETA DA CONEXION CON CONECTOR
BL		BASETTA DI LINEA - LINE PLATE - PLAQUETTE DE LIGNE - LINIE SOCKEL - REGLETA DA CONEXION
C1		COMMUTATORE PIASTRA E. 1 - CHANGE OVER SWITCH FOR ELECTRIC PLATE - COMMUTATEUR POUR PLAQUE ELECTRIQUE - UMSCHALTER FUER ELEKTRISCHE PLATTE - CONMUTADOR PLACA ELECTRICA 1
C2		COMMUTATORE PIASTRA E.2 - CHANGE OVER SWITCH FOR ELECTRIC PLATE - COMMUTATEUR POUR PLAQUE ELECTRIQUE - UMSCHALTER FUER ELEKTRISCHE PLATTE - CONMUTADOR PLACA ELECTRICA 2
C3		COMMUTATORE PIASTRA E.3 - CHANGE OVER SWITCH FOR ELECTRIC PLATE - COMMUTATEUR POUR PLAQUE ELECTRIQUE - UMSCHALTER FUER ELEKTRISCHE PLATTE - CONMUTADOR PLACA ELECTRICA 3
C4		COMMUTATORE PIASTRA E.4 - CHANGE OVER SWITCH FOR ELECTRIC PLATE - COMMUTATEUR POUR PLAQUE ELECTRIQUE - UMSCHALTER FUER ELEKTRISCHE PLATTE - CONMUTADOR PLACA ELECTRICA 4
CA		CANDELETTE ACCENSIONE - SPARKING - BOUGIES - ZUENDKERZEN - BUJIA ENCENDIDO ELECTRONICO
CE		REGOLATORE DI ENERGIA - ENERGY REGULATOR - REGULATEUR ENERGIE - ENERGIE-REGULATOR - REGULADOR ENERGIA
CO		COMMUTATORE - CHANGE OVER SWITCH - COMMUTATEUR - UMSCHALTER - CONMUTADOR
CR		MICROINTERRUTTORE SOTTOMANOPOLA PER GRILL - MICROSWITCH FOR GRILL - MICROINTERRUPTEUR POUR GRILL - MIKROSCHALTER FUER GRILL - MICROINTERRUPTOR GRILL
FT		TERMOFUSIBILE - FUSE - FUSIBLE - SCHMELZSICHERUNG - FUSIBLE
GA		TERRA ACC. ELETTRONICA - GROUND LINE-ELEC.IGNITION - MISE A LA TERRE-ALLUMAGE ELEC. - SCHUTZERUNG-ELEK. ENDZUENDUNG - TIERRA ENCENDIDO ELECTRONICO
GC		TERRA CASSONETTO - GROUNDLINE BOX - MISE A LA TERRE BOTTE - SCHUTZERUNG SCHACHTEL - TIERRA CAJA
GT		MORSETTO GENERALE DI TERRA - GROUND CONNECT. - SERRE- CABLE DE SOL - ERDKLEMME - TIERRA
LB		SPIA BARBECUE - BARBECUE LAMP - LAMPE BARBECUE - BARBECUE LAMPE - PILOTO BARBACOA
LC		SPIA RESISTENZA CIRCOLARE - ROUND HEATER CONTROL LAMP - LAMPE TEMOIN RESISTANCE RONDE - RUNDE HEIZWIDERSTAND KONTROLLAMPE PILOTO RESISTENCIA REDONDA
LD		SPIA SUOLA FORNO - LOWER HEATER LIGHT - LAMPE RESISTANCE INF. - UNTERER HEIZWIDERSTAND LAMPE - PILOTO RESISTENCIA SUELO
LE		SPIA BISTECCHIERA - STEAK GRILL LAMP - LAMPE PLAQUE CUISSON - KOCHPLATTE LAMPE - PILOTO PLACA COCCION
LF		SPIA FORNO - OVEN LAMP - LAMPE FOUR - OFFEN LAMPE - PILOTO HORNO
LG		SPIA GRILL - GRILL CONTROL LIGHT - LAMPE TEMOIN DU GRILLE - GRILL-KONTROL-LAMPE - PILOTO GRILL
LI		LAMPADA ILLUMINAZIONE FORNO - OVEN LAMP - LAMPE FOUR - OFEN LAMPE - LAMPADA HORNO
LM		LAMPADA MANOPOLA (intervideo) - KNOB LAMP - LAMPE MANETTE - KNOPF LAMPE - LAMPADA MANDO
LP		SPIA PIASTRA ELETTRICA - ELECTRIC PLATE CONTROL LIGHT - LAMPE TEMOIN PLAQUE CHAUFFANTE - KONTROL-LAMPE-KOCHPLATTE - PILOTO PLACA ELECTRICA
LR		SPIA FRIGGITRICE - DEEP FAT FRYER - LAMPE POUR FRITEUSE - BRATPFANNE LAMPE - PILOTO FREIDORA

LEGENDA COMPONENTI - COMPONENT LIST - LISTE COMPOSANTES - KOMPONENTEN LISTE - LEYENDA COMPONENTES

LS		SPIA GENERALE - MAIN CONTROL LIGHT - LAMPE TEMOIN GENERALE - HAUPT-KONTROL-LAMPE - PILOTO MARCHA
LU		SPIA CIELO FORNO - UPPER HEATER LIGHT - LAMPE RESISTANCE SUP. - OBERER HEIZWIDERSTAND LAMPE - PILOTO RESISTENCIA SUPERIOR
LV		SPIA VENTILATORE - MOTOR FAN LAMP - LAMPE MOTOVENTILATEUR - MOTORVENTILATOR LAMPE - PILOTO MOTOVENTILADOR
ME		PROGRAMMATORE ELETTROMECCANICO - ELECTROMECHANIC TIMER - PROGRAMMATEUR ELECTROMECANIQUE - ELEKTROMEKANISCHE PROGRAMMSCHALTER - PROGRAMADOR ELECTROMECANICO
MG		MOTORINO GIRARROSTO - TURNSPIT MOTOR - MOTEUR TOURNEBROCHE - BRATENSPIESS-MOTOR - MOTOR GIRA-ESPADIN
MM1		PROGRAMMATORE MECCANICO - MECHANIC TIMER - PROGRAMMATEUR MECANIQUE - MEKANISCHE PROGRAMMSCHALTER - PROGRAMADOR MECANICO
MM2		PROGRAMMATORE MECCANICO 2 CONTATTI - 2 CONTACTS MECHANIC TIMER - PROGRAMMATEUR ELECRTONIQUE 2 CONTACTS - 2 KONTAKTE ELEKTRON. PROGRAMMSCHALTER - PROGRAMADOR ELECTRONICO 2 CONTACTOS
MR		MOTORINO RAFFREDDAMENTO - COOLING FAN MOTOR - MOTEUR DE REFROIDISSEMENT - ABKUEHLUNG-VENTILATOR - MOTOR DE REFTIGERACION
MT1		PROGRAMMATORE ELETTRONICO - ELECTRONIC TIMER - PROGRAMMATEUR ELECRTONIQUE - ELEKTRON. PROGRAMMSCHALTER - PROGRAMADOR ELECTRONICO
MT2		PROGRAMMATORE ELETTRONICO DOPPIO CONTATTO - 2 CONTACTS ELECTRONIC TIMER - PROGRAMMATEUR ELECRTONIQUE 2 CONTACTS - 2 KONTAKTE ELEKTRON. PROGRAMMSCHALTER - PROGRAMADOR ELECTRONICO 2 CONTACTOS
MT3		PROGRAMMATORE ELETTRONICO - ELECTRONIC TIMER - PROGRAMMATEUR ELECRTONIQUE - ELEKTRON. PROGRAMMSCHALTER - PROGRAMADOR ELECTRONICO
MV		MOTORINO VENTILATORE - FAN MOTOR - MOTOVENTILATEUR - MOTORVENTILATOR - MOTOR VENTILADOR
PC		PIANO COTTURA - HOBS - PLAN CUISSON - KOCHPLATTEN - PLACAS
PE		PIASTRA ELETTRICA - ELECTRIC HOT PLATE - PLAQUE CHAUFFANTE ELECTRIQUE - ELEKTRISCHE KOCHPLATTE - PLACA ELECTRICA
PEV		PIASTRA ELETTRICA - HEATER HOTPLATE - RESISTENCE PLAQUE ELECTRIQUE - HEIZUNG ELEKTRISCHE KOCHPLATTE - RESISTENCIA PLACA ELECTRICA
R1-2		RESISTENZA PIASTRA ELETTRICA - HOTPLATE - PLAQUE ELECTRIQUE - ELEKTRISCHE KOCHPLATTE - PLACA ELECTRICA
RB		RESISTENZA BARBECUE - BARBECUE HEATING ELEMENT - RESISTANCE BARBECUE - BARBECUE-HEIZWIEDERSTAND - RESISTENCIA BARBACOA
RC		RESISTENZA CIRCOLARE - ROUND HEATING ELEMENT - RESISTANCE RONDE - RUNDE HEIZWIDERSTAND - RESISTENCIA REDONDA
RD		RESISTENZA SUOLA FORNO - OVEN LOWER HEATER - FOUR RESISTANCE INF. - OFEN UNTERER HEIZWIDERSTAND - RESISTENCIA SUELO
RE		RESISTENZA BISTECCHIERA - STEAK GRILL HEATING ELEMENT - RESISTANCE PLAQUE CUISSON - KOCHPLATTE-HEIZWIEDERSTAND - RESISTENCIA PLACA COCCION
RF		RESISTENZA FORNO - OVEN HEATING ELEMENT - RESISTANCE FOUR - OFEN-HEIZWINDERSTAND - RESISTENCIA HORNO
RG		RESISTENZA GRILL - GRILL HEATING ELEMENT - RESISTANCE GRILLE - GRILL-HEIZWIDERSTAND - RESISTENCIA GRILL
RI		RESISTENZA INTERNA INFERIORE - INNER LOWER HEATING ELEMENT - RESISTANCE INFERIEUR INTERIEUR - INNEN-UNTERE-HEIZWIDERSTAND - RESISTENCIA INFERIOR INTERIOR
RR		RESISTENZA FRIGGITRICE - DEEP FAT FRYER HEATER - RESISTANCE POUR FRITEUSE - BRATPFANNE-HEIZWIDERSTAND - RESISTENCIA PARA FREIDORA
RU		RESISTENZA CIELO FORNO - UPPER OVEN HEATER - RESISTANCE FOUR SUP - OB. OFEN-HEIZWIDERSTAND - RESISTENCIA SUPERIOR
S11		SELETTORE 11 POSIZIONI - 11 WAY SELECTOR - SELECTEUR 11 POSITIONS - 11 POS.-WAEHLSCHALTER - SELECTOR 11 POSICION

LEGENDA COMPONENTI - COMPONENT LIST - LISTE COMPOSANTES - KOMPONENTEN LISTE - LEYENDA COMPONENTES

S7		SELETTORE 7 POSIZIONI - 7 WAY SELECTOR - SELECTEUR 7 POSITIONS - 7 POS.-WAEHLSCHALTER - SELECTOR 7 POSICION
SC		SCHEDA ELETTRONICA - ELESTRONIC MODULE -MODULE ELECTRONIQUE - ELEKTRONICHER MODUL - MODULO ELECTRONICO
SD		TEMPORIZZATORE - START DELAY - RETARDATEUR DE DEPART - START-VERSPAETER - RETARDADOR DE MARCHA
SE		SONDA ELETTRONICA TEMPERATURA - TEMPERATURE SENSING PROBE - SONDE LECTURE TEMPERATURE - ELEKTRISCHE WAERMESONDE - SONDA DETECT. TEMPERATURA
SL		SELETTORE - SELECTOR - SELECTEUR - WAEHLSCHALTER - SELECTOR
SM		SCHEDA MADRE - MOTHER BOARD - MODULE ELECTRONIQUE - ELEKTRONENSTEUERUNG - MODULO ELECTRONICO
ST		OROLOGIO ANALOGICO CONTAMINUTI - MINUTES MINDER CLOCK - HORLOGE COMPTE MINUTES - MINUTENZAHLER-UHR - RELOJ CUENTAMINUTOS
SV		SCHEDA DISPLAY - DISPLAY BOARD - MODULE ELECTRONIQUE DISPLAY- ELEKTRONENDISPLAY - MODULO ELECTRONICO DISPLAY
TP		TERMOPROTETTORE - THERMAL PROTECTOR - PROTECTEUR TERMIQUE - THERMAL-SCHUTZVORRICHTUNG
TR		TERMOSTATO REGOLABILE - ADJUSTTABLE THERMOSTAT - THERMOSTAT REGULATEUR TEMPERATURE - TEMPERATU-REGLER-THERMOSTAT - TERMOSTATO REGULABLE
TS		TERMOSTATO DI SICUREZZA - SECURITY THERMOSTAT - THERMOSTAT DE SICURITE - SICHERHELTS-THERMOSTAT - TERMOSTATO SEGURIDAD
VC		TASTO ACC. ELETTR. INCORPORATO - INCORPORATED ELEC.IGNITION PUSH-BOTTON - TEUCHE ALLUMAGE ELEC INCORPORE - EINGEBAUTE ELEK. ENDZUENDUNG TASTE - TECLA ENCENDIDO ELECTRONICO ENCORPORADO
VG		TASTO GIRARROSTO - TURNSPIT SWITCH - INTERRUPTEUR TOURNEBROCHE - BRATENSPIESS-SCHALTER - TECLA GIRA-ESPADIN
VI		TASTO ILLUMINAZIONE FORNO - OVEN LIGHT SWITCH - INTERRUPTEUR LUMIERE DU FOUR - OFENLAMPENSCHALTER - TECLA LAMPARA HORNO
VM		TASTO MICRO - MICROSWITCH - MICROINTERRUPTEUR - MIKROSCHALTER - TECLA MICRO
VP		TASTO PIASTRA ELETTRICA - HOTPLATE SWITCH - INTERRUPTEUR PLAQUE ELECTRIQUE - ELEKTRISCHE KOCHPLATTE SCHALTER - TECLA PLACA ELECTRICA
VR		TASTO GRILL - GRILL PUSH-BOTTON - TEUCHE GRILL - GRILL TASTE - TECLA GRILL
VT		TASTO ACC. ELETTR. SEPARATO - ELEC.IGNITION PUSH-BOTTON - TEUCHE ALLUMAGE ELEC - ELEK. ENDZUENDUNG TASTE - TECLA ENCENDIDO ELECTRONICO